


STAGE PLAN – FDA Ensemble

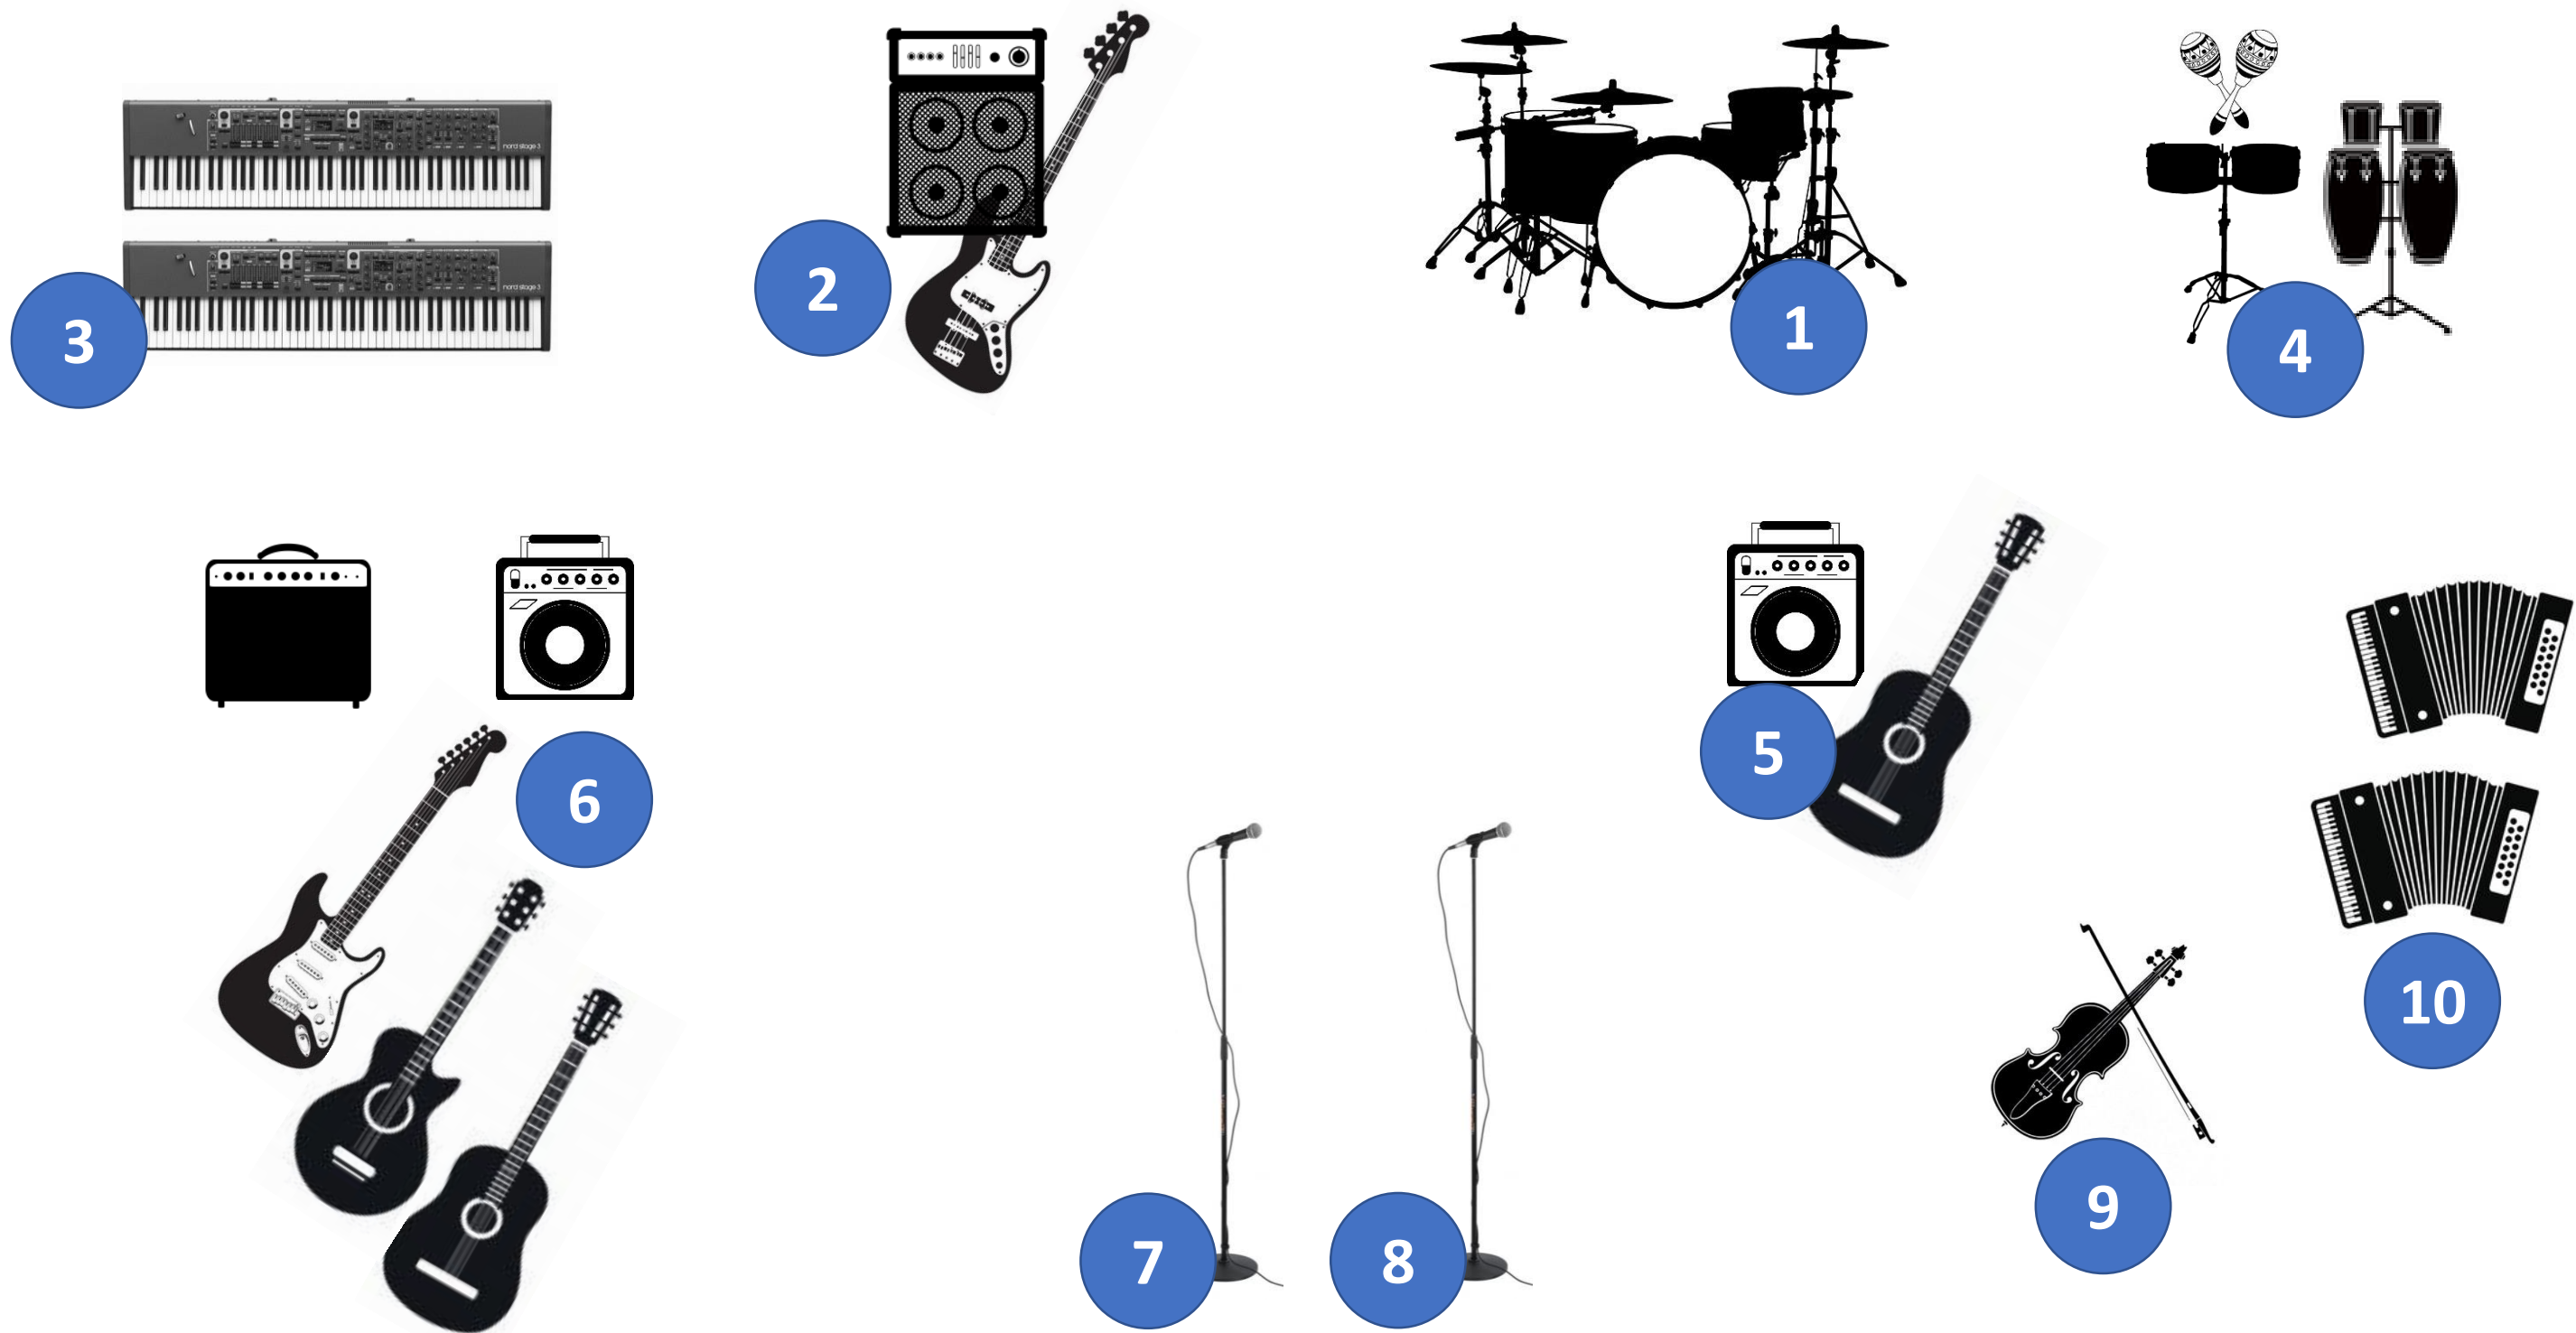

| NR | Instrument | INPUT | Instrument/Source | Microphone/D.I. Box | Stand/Asta | 48V | Conn. | Stage monitor | in-ear monitor | Sedia/sgabello | Alim. | NOTE |
|----|-----------------------------|-------|--|------------------------------|------------|-----|------------|---------------|----------------|----------------|----------|----------------|
| 1 | Drum | 1 | Kick | AKG D112 (o sim.) | Baby | | XLR | | | | | |
| | | 2 | Snare Top | Shure SM57 | Clamp | | XLR | | | | | |
| | | 3 | Snare Bottom | Shure SM57 (se necessario) | Baby | | XLR | | | | | |
| | | 4 | Tom 1 | SENNHEISER E604/421 (o sim.) | Clamp | | XLR | | | | | |
| | | 5 | Tom 2 | SENNHEISER E604/421 (o sim.) | Clamp | | XLR | | X | X | 1 schuko | |
| | | 6 | FT 1 | SENNHEISER E604/421 (o sim.) | Clamp | | XLR | | | | | |
| | | 7 | FT 2 | SENNHEISER E604/421 (o sim.) | Clamp | | XLR | | | | | |
| | | 8 | O.H. L | Neu, KM 184 (o similare) | Tall | X | XLR | | | | | |
| | | 9 | O.H. R | Neu, KM 184 (o similare) | Tall | X | XLR | | | | | |
| 2 | Bass | 10 | Amplifier (D.I) | D.I. from Amp | | | XLR | | X | | 2 schuko | |
| | Doublebass | 11 | instrument | D.I. Box | | | XLR | | | | | |
| 3 | Keyboard 1 | 12 | Channel L | D.I. Box | | | Jack | | | | 2 schuko | In ear Stereo! |
| | | 13 | Channel R | D.I. Box | | | Jack | | X | X | | |
| | Keyboard 2 | 14 | Channel L | D.I. Box | | | Jack | | | | 2 schuko | |
| | | 15 | Channel R | D.I. Box | | | Jack | | | | | |
| 4 | Percussion | 16 | Channel Left | Neu, KM 184 (o similare) | Tall | X | XLR | | | | | |
| | | 17 | Channel Central | Neu, KM 184 (o similare) | Tall | X | XLR | X | | | | |
| | | 18 | Channel Right | Neu, KM 184 (o similare) | Tall | X | XLR | | | | | |
| 5 | Nylon Guitar | 19 | Amplifier (D.I) Ch1 Amplifier (D.I) Ch2 | D.I. from Amp | | | XLR XLR | | X | X | 1 schuko | |
| 6 | Electric Guitar | 20 | Amplifier | Shure SM57 (o similare) | Baby | | XLR | | | | | |
| | Nylon Guitar Folk Guitar | 21 | Amplifier (D.I) Ch1 Amplifier (D.I) Ch2 | D.I. from Amp | | | XLR | X | X | X | 3 schuko | |
| 7 | Voice 1 | 22 | Microphone | Shure SM 58 | Tall | | XLR | | X | | 1 schuko | |
| 8 | Voice 4 (SERVICE) | 23 | Microphone | Shure SM 58 | Tall | | XLR | | | | | |
| 9 | Violin | 24 | instrument | D.I. Box | | X | XLR | X | | X | 1 schuko | Radio |
| 10 | Accordion 1 | 25 | instrument | Shure SM 58 | | | XLR | X | | X | 1 schuko | |
| | Accordion 2 | 26 | instrument | D.I. Box | | | XLR | | | | | |